



MCS-833 2 Decade Counter, MCS-834 4 Decade Counter Plug-In Modules for MCS-165 Series

Installation Instructions

P-241-81
819-0502

⚠ WARNING Failure to follow these instructions may result in product damage, equipment damage, and serious or fatal injury to personnel.

Outline Diagram

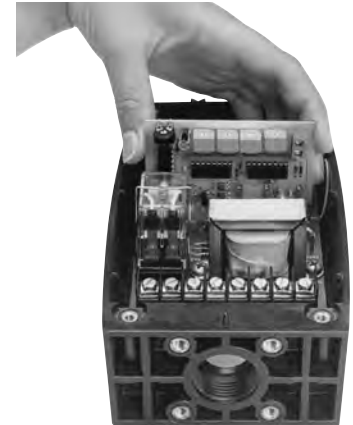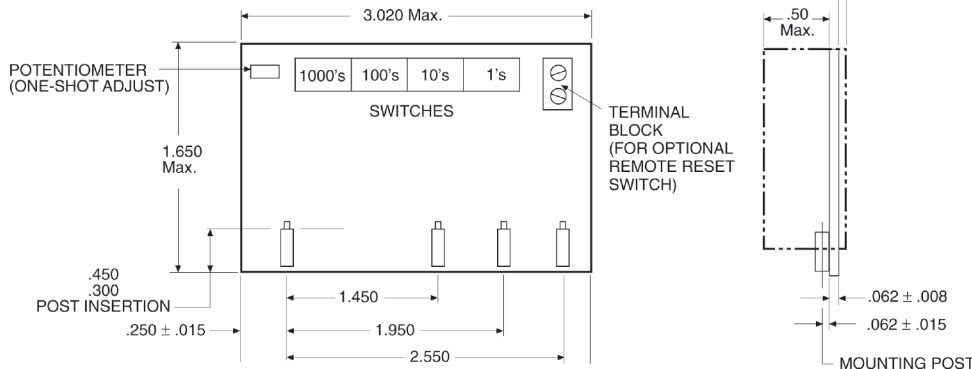

Specifications

Mounting:	Plug-in, mates directly with connector on photo electric amplifier board.										
Electrical:	<table border="0"> <tr> <td>Pin No.</td> <td>Function</td> </tr> <tr> <td>In</td> <td>Counter input</td> </tr> <tr> <td>Out</td> <td>Counter output (one-shot)</td> </tr> <tr> <td>+</td> <td>+15VDC input</td> </tr> <tr> <td>-</td> <td>Return (ground)</td> </tr> </table>	Pin No.	Function	In	Counter input	Out	Counter output (one-shot)	+	+15VDC input	-	Return (ground)
Pin No.	Function										
In	Counter input										
Out	Counter output (one-shot)										
+	+15VDC input										
-	Return (ground)										
Timing Control:	Potentiometer, adjustable										
Weight:	1 oz.										
Ambient Temperature	0-125°F. (-18 - +52°C)										
Counting Range:	MCS-833 1-99 MCS-834 1-999										
Max. Count Input:	300 Counts/sec.										
One-Shot:	Timing Range— 0.1 to 0.5 sec. Reset time—1 millisecond										
Part Number											
MCS-833:	7400-448-021										
MCS-834:	7400-448-022										

Operation

Warner Electric MCS-833 and MCS-834 counters are optional plug-in modules which modify the basic on-off photo-electric control operation. With the module installed, the photoelectric control will have a one-shot output after receiving a presettable number of inputs. The maximum continuous counting rate will be limited by the one-shot time and can be expressed by the formula:

$$\text{Counting rate} < \frac{\text{Preset count}}{\text{One-shot time}}$$

To maximize the continuous counting rate, adjust the one-shot time to the minimum acceptable for the application.

The mode of operation will be effected by the "light/dark" switch in the photoelectric control. Objects are counted as they enter the photoelectric beam regardless of light or dark operational modes.

Installation

The photoelectric amplifier board is provided with a connector to accept the counter module. simply insert the counter, set the desired count, and adjust the one-shot output potentiometer. A terminal block is provided for an optional external reset switch. The switch, if used, should be an SPST, N.O., momentary type. This switch can reset the counter at any time in the counting cycle.

Warranty

Warner Electric LLC warrants that it will repair or replace (whichever it deems advisable) any product manufactured and sold by it which proves to be defective in material or workmanship within a period of one (1) year from the date of original purchase for consumer, commercial or industrial use.

This warranty extends only to the original purchaser and is not transferable or assignable without Warner Electric LLC's prior consent.

Warranty service can be obtained in the U.S.A. by returning any defective product, transportation charges prepaid, to the appropriate Warner Electric LLC factory. Additional warranty information may be obtained by writing the Customer Satisfaction Department, Warner Electric LLC, 449 Gardner Street, South Beloit, Illinois 61080, or by calling 815-389-3771.

A purchase receipt or other proof of original purchase will be required before warranty service is rendered. If found defective under the terms of this warranty, repair or replacement will be made, without charge, together with a refund for transportation costs. If found not to be defective, you will be notified and, with your consent, the item will be repaired or replaced and returned to you at your expense.

This warranty covers normal use and does not cover damage or defect which results from alteration, accident, neglect, or improper installation, operation, or maintenance.

Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

Warner Electric LLC's obligation under this warranty is limited to the repair or replacement of the defective product and in no event shall Warner Electric LLC be liable for consequential, indirect, or incidental damages of any kind incurred by reason of the manufacture, sale or use of any defective product. Warner Electric LLC neither assumes nor authorizes any other person to give any other warranty or to assume any other obligation or liability on its behalf.

WITH RESPECT TO CONSUMER USE OF THE PRODUCT, ANY IMPLIED WARRANTIES WHICH THE CONSUMER MAY HAVE ARE LIMITED IN DURATION TO ONE YEAR FROM THE DATE OF ORIGINAL CONSUMER PURCHASE. WITH RESPECT TO COMMERCIAL AND INDUSTRIAL USES OF THE PRODUCT, THE FOREGOING WARRANTY IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Changes in Dimensions and Specifications

All dimensions and specifications shown in Warner Electric catalogs are subject to change without notice. Weights do not include weight of boxing for shipment. Certified prints will be furnished without charge on request to Warner Electric.



Warner Electric, LLC
449 Gardner Street • South Beloit, IL 61080
815-389-3771 • Fax: 815-389-2582
www.warnerelectric.com